

# Ignition housing

where the generator and the water pump are located

---

the leakage hole on the ignition housing  
... mostly well hidden holes and their meaning...

---

From:

<https://kleinjung.de/rotax/> -

Permanent link:

[https://kleinjung.de/rotax/doku.php?id=en:ignition\\_housing](https://kleinjung.de/rotax/doku.php?id=en:ignition_housing)

Last update: **10.02. 2025 07:29**

